


Chapter 10 Sterilization 3

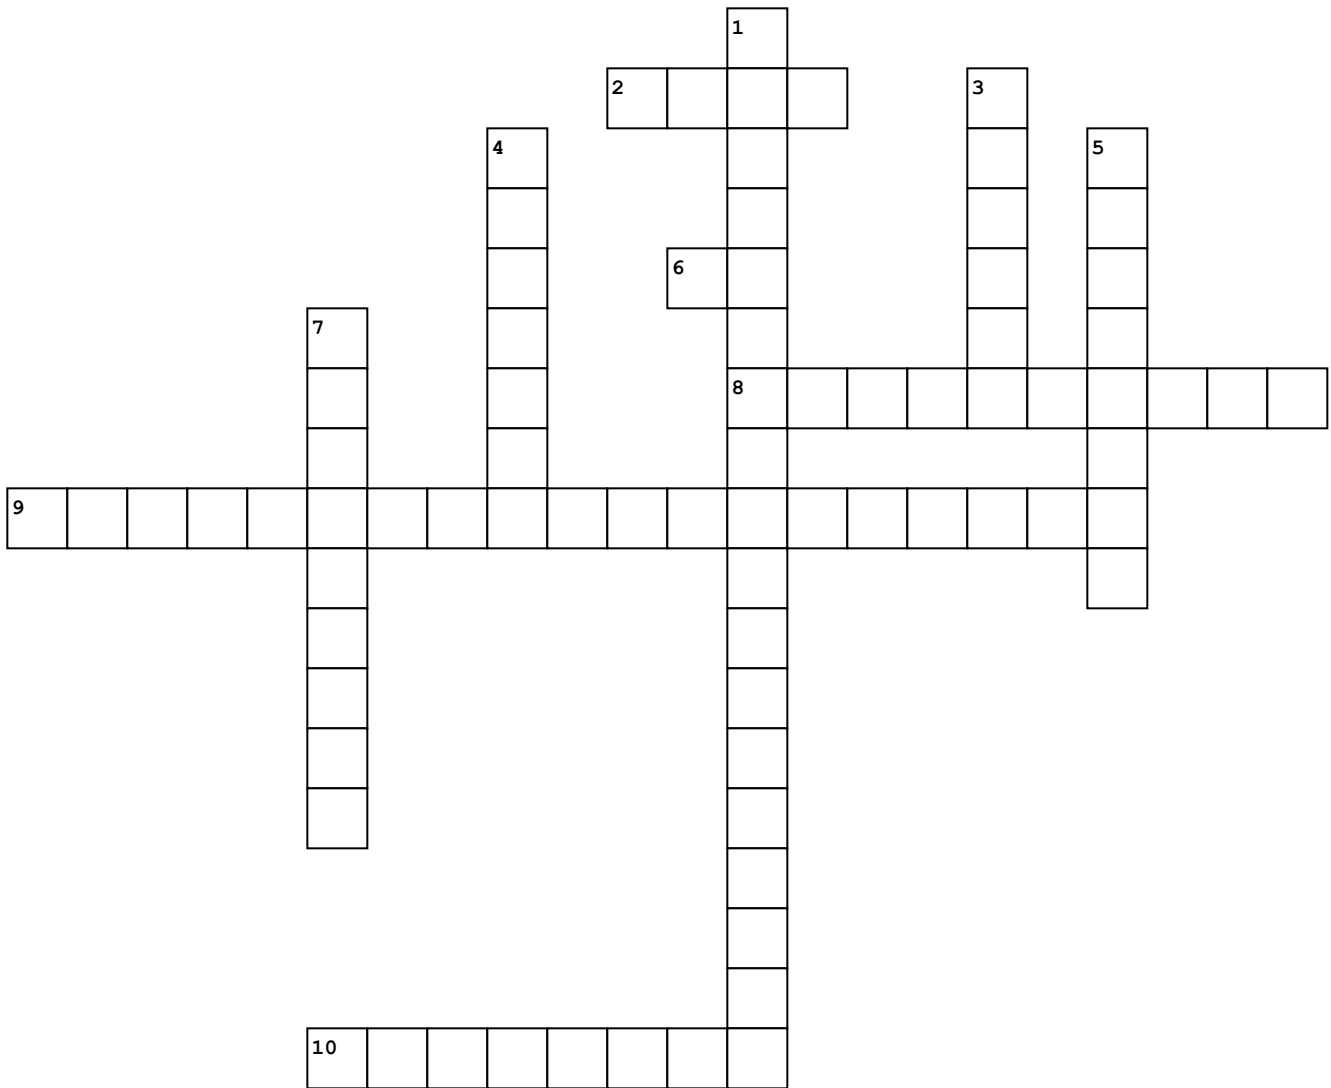

Across

- 2. requires each facility to have a written emergency plan
- 6. biological indicator
- 8. EO kills microorganisms by this means
- 9. these are used in small facilities
- 10. these should never be released from SPD if they have holes or tears

Down

- 1. these are used to monitor the sterilization process
- 3. this happens when items have to be processed correctly
- 4. type 1 indicator
- 5. this should be done to ensure there is no air removal detected
- 7. this must be positive for test results to be valid